


Packing List

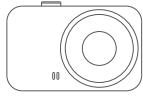

M1 Camera x1




GS6 GPS Module x1



S6 Holder x1



C1 Smart Charger x1



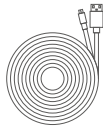


Power Cable x1



User Manual x1


Product Appearance & Keys

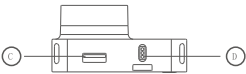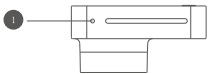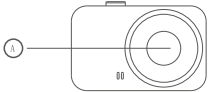


- 1 RESET
- 2 Power switch/OK
- 3 Menu/Mode

- A Wide angle lens
- B High-definition screen
- C TF card slot
- D Magnetic DC in/GPS signal interface

Instruction Manual

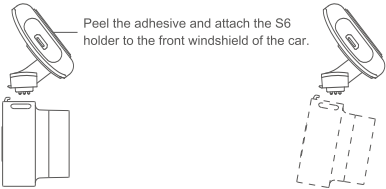


Peel the adhesive and attach the S6 holder to the front windshield of the car.

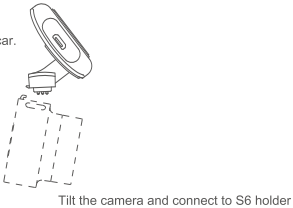

Tilt the camera and connect to S6 holder

Put the GS6 GPS module close to S6 holder and magnetic connect

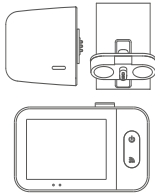


Specifications

Chipsets	NT96658
Sensor	SONY imx323
Lens	F2.0 150° Diagonal Wide Angle 6 layer glass+IR
LCD	2.0" IPS 320×240dots
GPS	External GPS Module Magnetic Connect
Resolution/FPS	1080P/30fps , 720P/60fps
Battery	Built-in Polymer Li-ion Battery 3.7V 420mAH
Speaker	8Ω 0.5W
Storage	Max: 64G micro SD
Image Technology	H.264 /MOV /WDR / x4 digital zoom
Security Application	G-sensor / Motion Detection / Parking Mode
Special Features	Quick disassembling/ Magnet power supply/MCU Protection
Working Temperature	-20℃—70℃

APP Instruction Manual

- 1,How to download APP ?
Search "antscam" in APP Store & Google Play
- 2,How to connect APP ?
a)Switch On/Off Wi-Fi for A1pro . Two ways to switch on Wi-Fi: 1,Long press "Down" key to switch on Wi-Fi when A1pro is standby ; 2,go to the setting mode to switch on WiFi .
b)Open Wi-Fi from your phone setting, to search SSID from A1pro. Choose and connect it with PW (12345678)
c)Connect successfully. Back to APP and click the icon "+" Connecting device , then you will see the video .

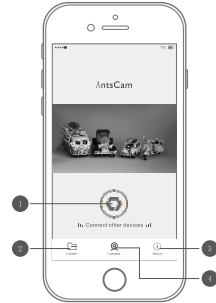

- 1 Connect device's Wi-Fi
- 2 Local File
- 3 About



- 4 Camera
- 5 Resolution
- 6 Start/Stop record


- 7 Device(TF card for A1pro) file
- 8 Take picture
- 9 Setting

Key Features

Button	Operation status	Functions
Power	Any status	Long-press to turn is off
	Video recording status	Short-press to "Stop" record
	Vidoe mode	Short-press to "Start" record
	Any menu	Short-press to "Confirm"
	Photo mode	Short-press to "Take picture"
	Playback mode	Short-press to "Start/Pause"
Menu/Mode	Video mode	Short-press to enter "video menu" Long press to switch photo mode-playback mode-video mode
	Video recording status	Short-press to "Lock" current video Long-press to turn Wi-Fi "On"
	Video menu	Short-press to select "Down" Long-press to exit video menu or switch video menu to setting menu
	Photo mode	Short-press to enter "photo menu" Long-press to "switch" playback mode-video mode-photo mode
	Playback mode	Short-press to "next video" Long-press to "switch" video mode-photo mode-playback mode
RESET		Short-press to "Reset"

Notes: The yellow marks are quick operate

Installation Steps

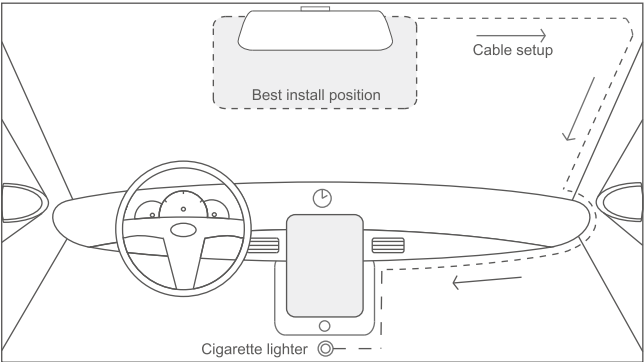

- 1.Choose the install position and clean it in advance 2.Fix the camera holder 3.Setup the power cable
4.Connect to charger to cigarette lighter 5.Insert TF card into camera 6. Put camera into holder

M1 Dash Camera
Quick User Manual